





# INSTALACE SPRCHOVÉHO SETU:


1. Při zapouštění těla baterie do zdi neodstraňujte plastový kryt baterie, aby nedošlo k možnému poškrábání nebo jinému poškození. Kryt by měl být odstraněn až po přišroubování těla baterie ke stěně (bod 3).

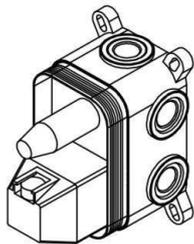


2. Do zdi by měl být vyřezán otvor min. šířka 151 mm, min. výška 101 mm a hloubka 68-82 mm, což vám umožní skrýt zapuštěnou část baterie. Je také nutné připravit výstup teplé a studené vody, stejně jako vývod vody do hlavové sprchy a ruční. POZOR! Uvedený rozsah hloubky zohledňuje tloušťku dlaždic použitých na stěně. Při určování hloubky otvoru je důležité vzít v úvahu tloušťku dlaždic, které budou položeny na vybranou stěnu.

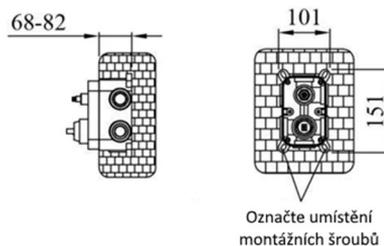


3. Vyrvejte otvory (vrták Ø6 mm) na označená místa a namontujte tělo baterie pomocí příložené montážní sady. Sejměte plastový kryt vnitřních součástí baterie. Poté připojte vývody teplé a studené vody k tělu baterie, přičemž dávejte pozor na místo, kde je připojena teplá a studená voda, a na výstup vody k sprchové hlavici, výtoku a sprchové hlavici – příslušné označení je na těle baterie. Pro kontrolu správné instalace všech spojů a jejich těsnosti pusťte proud vody po dobu 1 – 2 minuty.

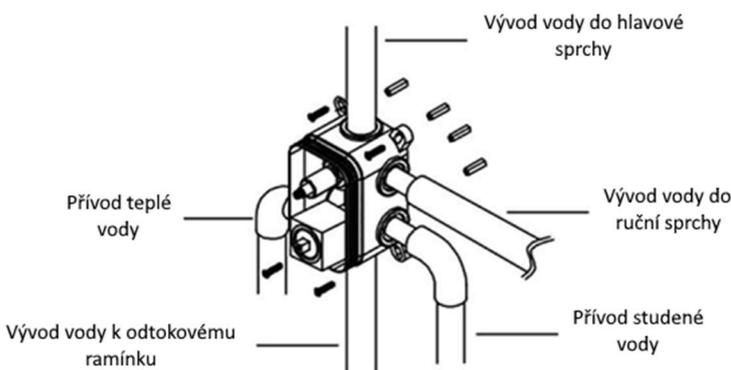


4. Dále nainstalujte ozdobnou rozetu na tělo baterie, nasadte držák baterie a spínač ruční sprchy / sprchové hlavice / ramínka, poté oba prvky utáhněte pomocí HEX klíče, který je součástí sady, a na šrouby nasadte maskovací prvky.

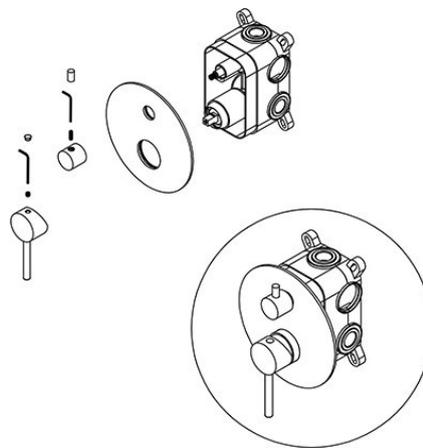


5. Navíňte teflonovou pásku na závit nástěnného ramene, poté umístěte ozdobnou rozetu ramene v místě, kde voda vede k sprchové hlavici, a připojte nástěnné rameno s vývodem vody. Po instalaci nástěnného ramene našroubujte sprchovou hlavici.

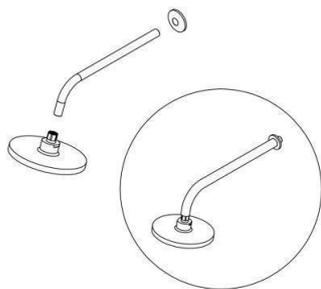


6. Teflonová páska by měla být navinuta na závit rukojeti, která upevňuje sprchovou hlavici, poté by měla být umístěna ozdobná rozeta na místo, kde je voda vypouštěna do sprchové hlavice, a měl by být připojen držák s výstupem vody. Po instalaci rukojeti připojte sprchovou hadici k držáku a sprchové hlavici.

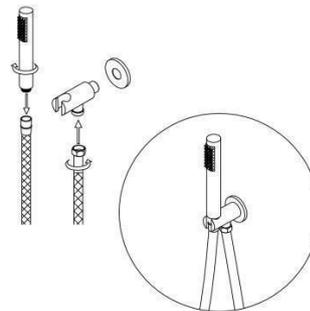

7. Kolem závitů výtokového ramínka se omotá teflonová páska, poté umístěte ozdobnou rozetu na místo výstupu vody a připojte ramínko k výstupu vody.

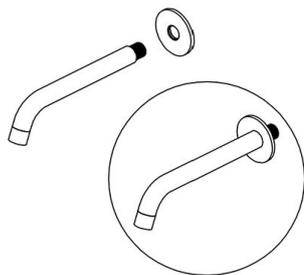

8. Montáž je nyní dokončena.

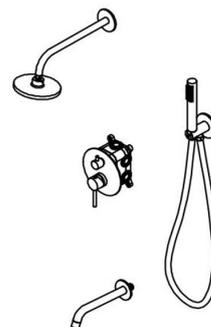


**POZOR!** Instalaci sprchového setu nechte provést pouze odborným dodavatelem. Instalace soupravy neoprávněnými osobami může mít za následek poškození výrobku a dalších prvků vybavení, jako jsou obklady, sprchové vaničky atd.




## SHOWER SET INSTALLATION:


1. When placing the faucet main body in the wall, do not remove the plastic faucet protection cover to avoid any scratches or other damages to the inner faucet elements. The cover should only be removed after screwing the faucet body to the wall (point 3).

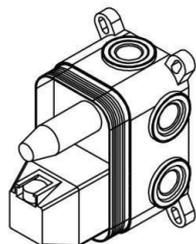


2. Make a hole in the wall with a min. width 151 mm, min. height 101 mm and depth 68-82 mm, which will hide the concealed part of the faucet. At this point hot and cold water outlets, as well as outlets for both showers should be prepared. CAUTION! The depth range includes the thickness of the tiles used on the wall. When determining the depth of the hole, it is necessary to take into account what thickness of tiles will be laid on the selected wall.

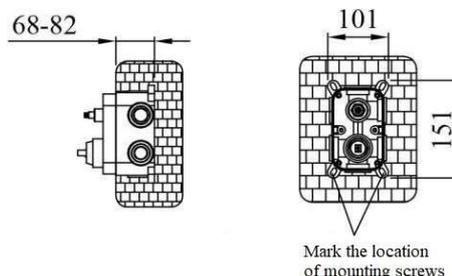


3. Drill holes in marked spots (use  $\varnothing 6$  mm drill), then mount the faucet main body using the enclosed installation kit. Remove the plastic protection cover. Then connect the hot and cold water outlets with the faucet body, paying attention to the place where the hot and cold water is connected and the water outlet to the handheld shower, water spout and shower head - appropriate markings are located on the body of the faucet. In order to check the correctness of assembly of all connections and their tightness, let the water jet run for 1-2 minutes.

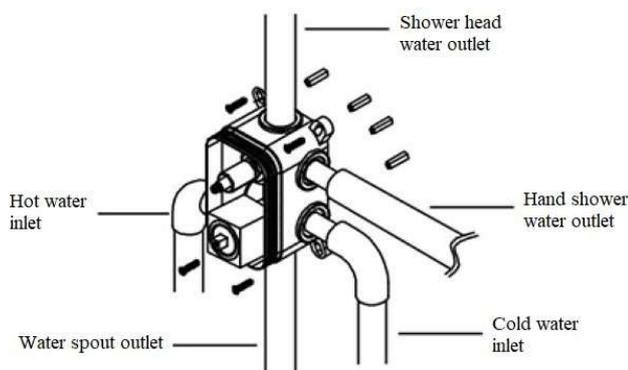


4. Next, install the decorative rosette on the faucet main body, mount the faucet handle and the handheld shower / water spout / shower head function switch, then tighten both elements with the included HEX key and cover the screws with supplied masking elements.

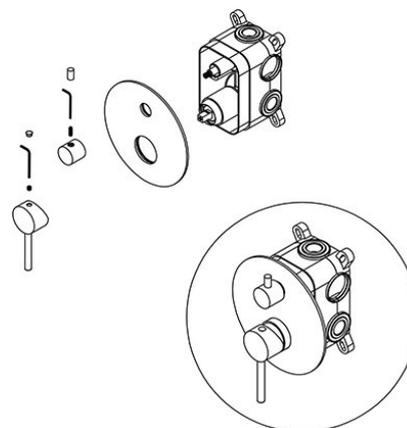


5. Wrap the teflon tape around the thread of the wall arm, then place a decorative rosette of the arm in the place where the head shower water outlet is prepared and connect the wall arm with the water outlet. After mounting the wall arm, screw on the head shower.

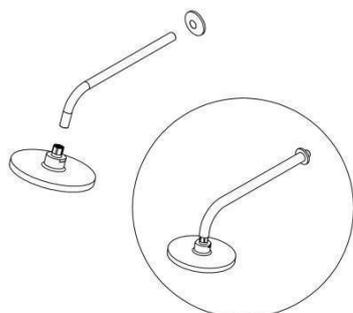


6. Wrap the teflon tape around the thread of the handheld shower mounting holder, then place a decorative rosette of the holder in the place where the handheld shower water outlet is prepared and connect the holder with the water outlet. After installing the handle, connect the shower hose to the holder and the handheld shower.

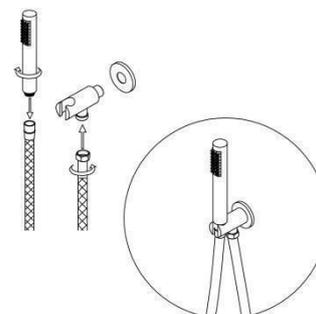

7. Wrap the teflon tape around the thread of the water spout, then place a decorative rosette of the spout in the place where the water spout outlet is prepared and connect the water spout with the water outlet.

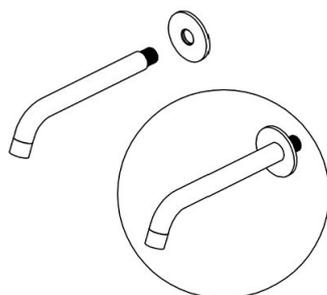

8. The installation is complete.

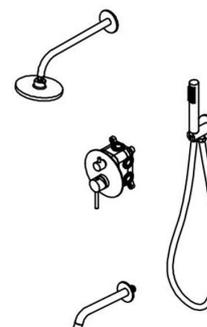

**CAUTION!** The installation of the in-wall shower set should only be carried out by a specialized contractor. Installation of the shower set by unauthorized persons may result in damage to the product or other bathroom equipment such as tiles, shower tray, etc.